



PTO - Plenum Takeoffs

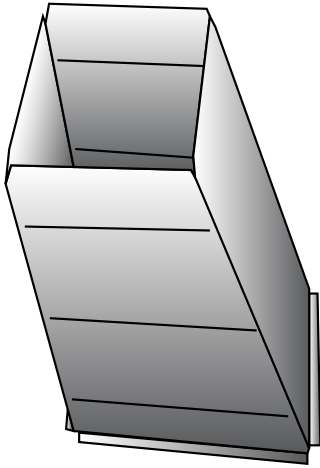

PTO

Code	Description, C x D to A x B with 'RISE'
PT0885N	Galvanized Plenum Take-off, 12" x 8" to 8" x 8" w/ 5" rise. Not assembled
PT088N	Galvanized Plenum Take-off, 12" x 8" to 8" x 8" w/ 3" rise. Not assembled
PT08105N	Galvanized Plenum Take-off, 12" x 10" to 8" x 10" w/ 5" rise. Not assembled
PT0810N	Galvanized Plenum Take-off, 12" x 10" to 8" x 10" w/ 3" rise. Not assembled
PT08125N	Galvanized Plenum Take-off, 12" x 12" to 8" x 12" w/ 5" rise. Not assembled
PT0812N	Galvanized Plenum Take-off, 12" x 12" to 8" x 12" w/ 3" rise. Not assembled
PT08145N	Galvanized Plenum Take-off, 12" x 14" to 8" x 14" w/ 5" rise. Not assembled
PT0814N	Galvanized Plenum Take-off, 12" x 14" to 8" x 14" w/ 3" rise. Not assembled
PT08165N	Galvanized Plenum Take-off, 12" x 16" to 8" x 16" w/ 5" rise. Not assembled
PT0816N	Galvanized Plenum Take-off, 12" x 16" to 8" x 16" w/ 3" rise. Not assembled
PT08185N	Galvanized Plenum Take-off, 14 ¹ / ₂ " x 15" to 8" x 18" w/ 3" rise. Not assembled
PT0818N	Galvanized Plenum Take-off, 14 ¹ / ₂ " x 15" to 8" x 18" w/ 5" rise. Not assembled
PT08205N	Galvanized Plenum Take-off, 16" x 15" to 8" x 20" w/ 3" rise. Not assembled
PT0820N	Galvanized Plenum Take-off, 16" x 15" to 8" x 20" w/ 5" rise. Not assembled
PT0820NCB	Galv. Plenum Take-off, cross broken, 16" x 15" to 8" x 20" w/ 3" rise. Not assembled
PT08225N	Galvanized Plenum Take-off, 17 ¹ / ₂ " x 15" to 8" x 22" w/ 5" rise. Not assembled
PT0824N	Galvanized Plenum Take-off, 19" x 15" to 8" x 24" w/ 3" rise. Not assembled

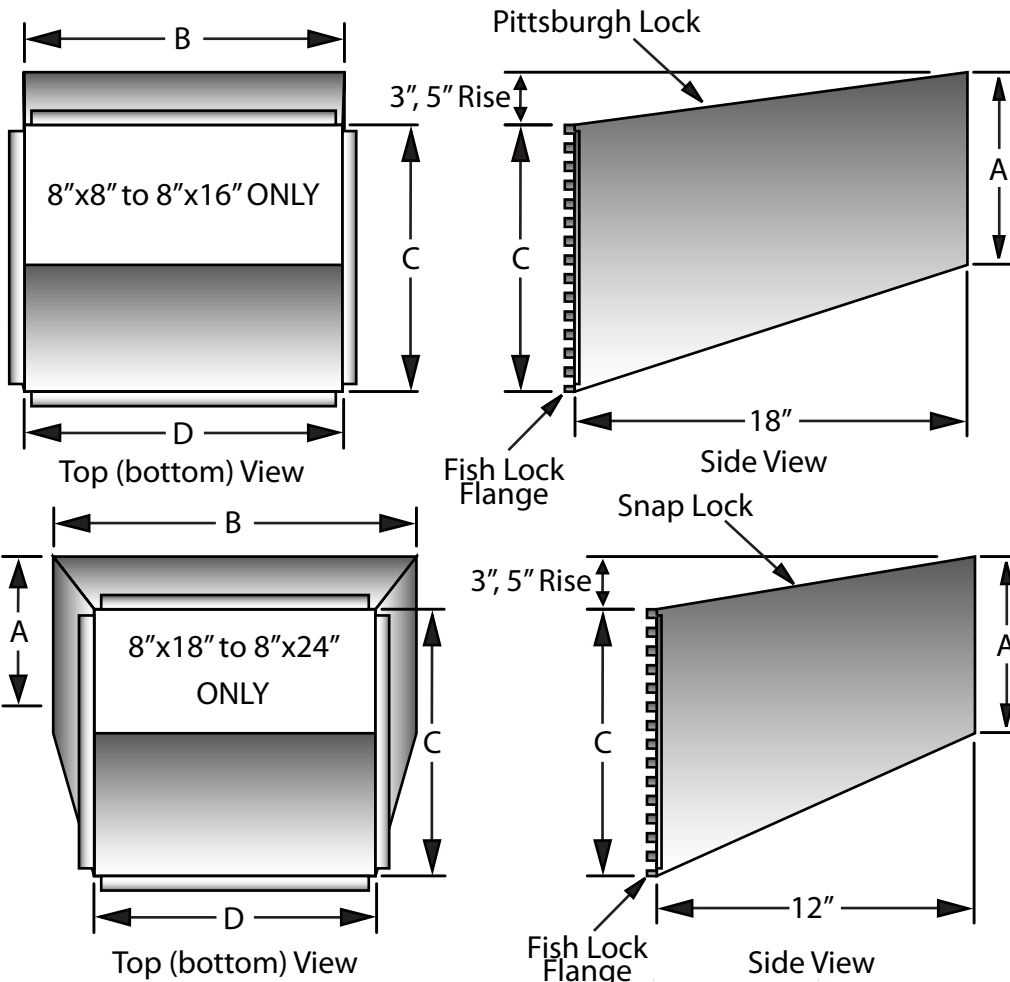


Performance Data
for galvanized, rectangular duct

Material


- galvanized steel
- thickness - 30ga. to 26ga.

Manufactured

- Not assembled in factory
- Manufacture with Duct-Snap Lock and Pittsburgh Lock
- Fish Lock Flange

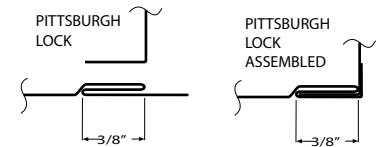

Lock used on 8x8 to 8x16"

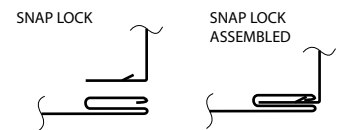

Lock used on 8x18 to 8x24"